



MAYER EMI

MD900

Backup / Restore



BACKUP / RESTORE TOOL **2**

BACKUP **4**

RESTORE **5**

FACTORY RESET **6**

Backup / Restore Tool


The backup and restore utility can be found on the USB stick in the md900-util-packages folder that is shipped with the MD900.

Alternatively, the tool can also be downloaded from the website (mayer-emi.at/support).


Utility package name: MD900-Backup-Restore.md900.pkg

To use the utility with the MD900, the package must be copied to the root directory of the USB stick.

- Copy the file MD900-Backup-Restore.md900.pkg to the root directory

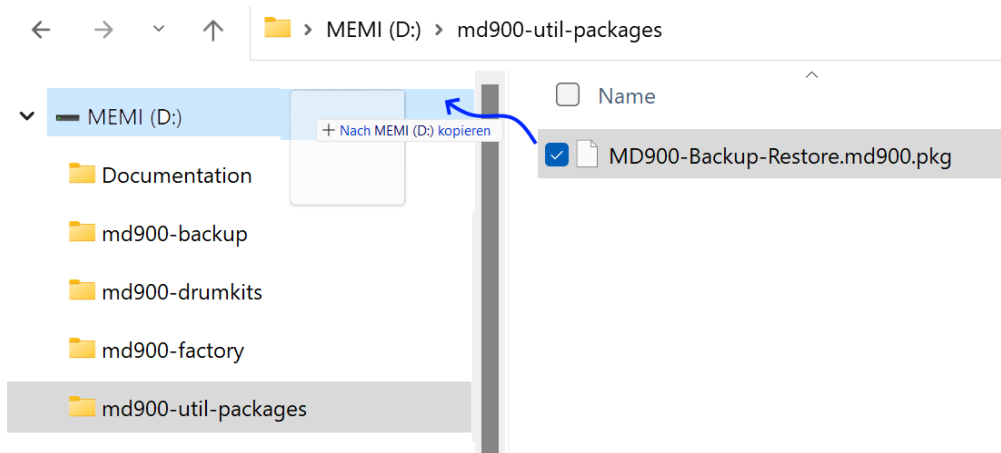

- After that the file is located in the root directory

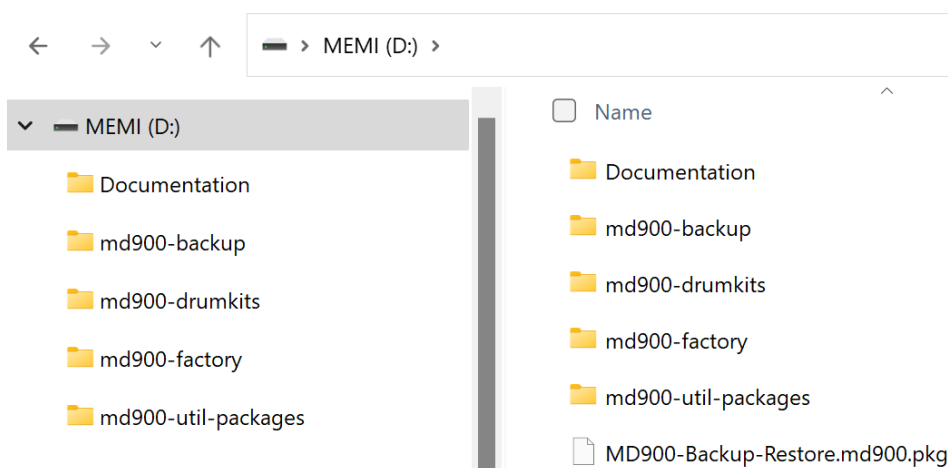



- Plug the USB stick into the MD900 at one of the 3 possible USB ports on the back of the MD900



Attention: The synthesizer will stop and start with Save / Restore mode.



Save all changes beforehand

- ☑ After the MD900 has read the USB stick and a prompt appears asking if the utility should be started

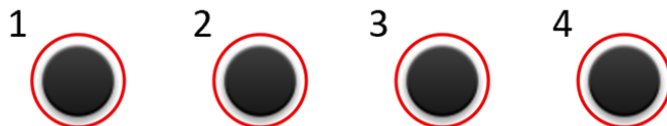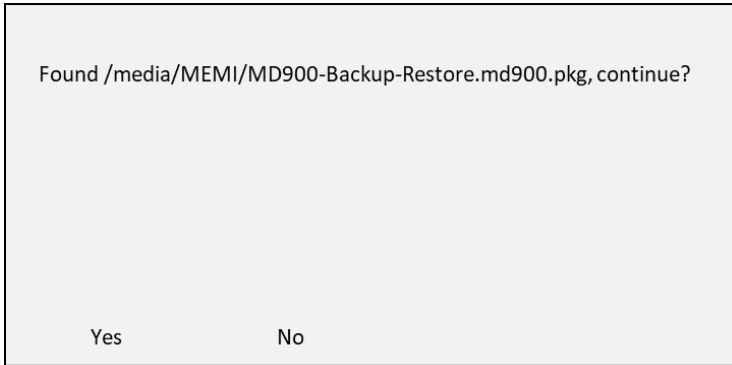

- ☑ Above the *push-turn control 1* appears the option: *Yes*
Above the *push-turn control 2* appears the option: *No*

- ☑ Pressing the push-turn 1 control (Yes option) starts Backup / Restore tool. After a short time, the user interface for Backup / Restore appears

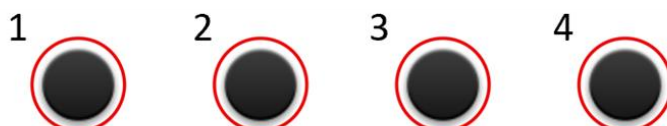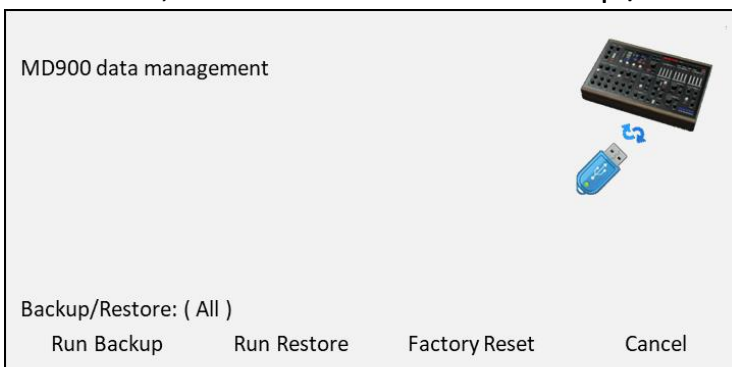

Attention: If there are other utility packages in the root directory of the USB stick (file extension *.md900.pkg*), a query is displayed for each individual package asking whether it should be executed.

Confirm the query with 'Yes' or 'No' - depending on whether an execution should take place or not.



Caution: To avoid data loss or incomplete data, do not interrupt active operations by turning off the MD900 or removing the USB stick.

Backup

The *Run Backup* option starts a backup of the data from the MD900 to the USB stick

- By turning the *push-turn button 1*, it is possible to select which data are to be saved from the MD900.

All *All data will be backed up*

Presets *Only preset data will be backed up*

AllWave *All wave files will be backed up*


WTable *Only wave files from wave tables will be backed up*

Noises *Only wave sample files from Noises will be backed up*

Drumkit *Only wave sample files from Drumkit will be backed up*

- Pressing the *push-turn 1 control* will start the backup operation

The backup operation may take some time

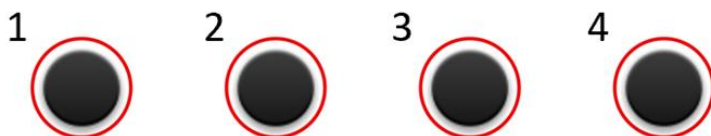

- Writing the data to the USB stick may take some time

During this time the following message appears:

--> **Write to Stick, please wait ...**

- After all data has been safely saved to the USB stick, the following message appears:

--> **Write to Stick, please wait ... ok**

- The backup process has completed

Restore

The *Run Restore* option starts a restore of the data from the USB stick to the MD900

- By turning the *push-turn button 2*, it is possible to select which data are to be restored from the USB-Stick.

All *All* data will be restored

Presets Only *preset* data will be restored

AllWave All wave files will be restored



WTable Only wave files from wave tables will be restored

Noises Only wave sample files from Noises will be restored

Drumkit Only wave sample files from Drumkit will be restored

- Pressing the *push-turn 2 control* will start the restore operation

The restore operation may take some time

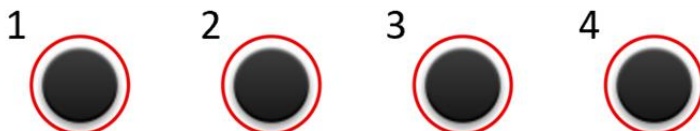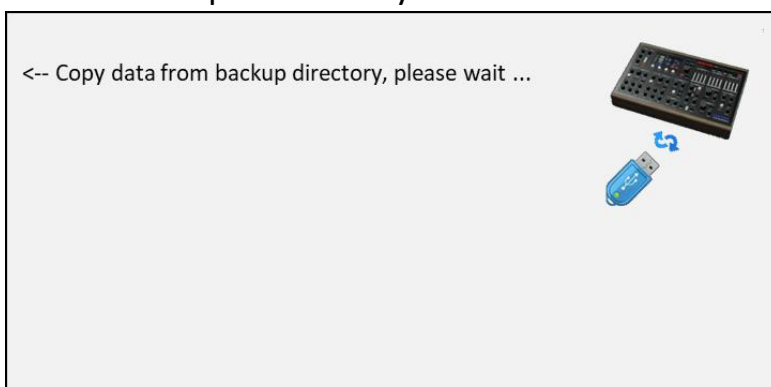

- Writing the data to the MD900 device may take some time

During this time the following message appears:

--> **Write to Disk, please wait ...**

- After all data has been safely saved to the MD900, the following message appears:

--> **Write to Disk, please wait ... ok**

- The restore process has completed

Factory reset

With the *Factory Reset* option, all data is reset to the delivery status.



Info: This option is only executed correctly if factory data is available on the USB stick and are present in the *md900-factory* folder.

- Pressing the *push-turn control 3* starts the factory data recovery process. The restore operation may take some time. During this time the following message appears:
Reset to factory data, please wait ...
- Writing the data to the MD900 device may take some time
During this time the following message appears:
--> Write to Disk, please wait ...
- After all data has been safely saved to the MD900, the following message appears:
--> Write to Disk, please wait ... ok
- The factory data reset process has completed